
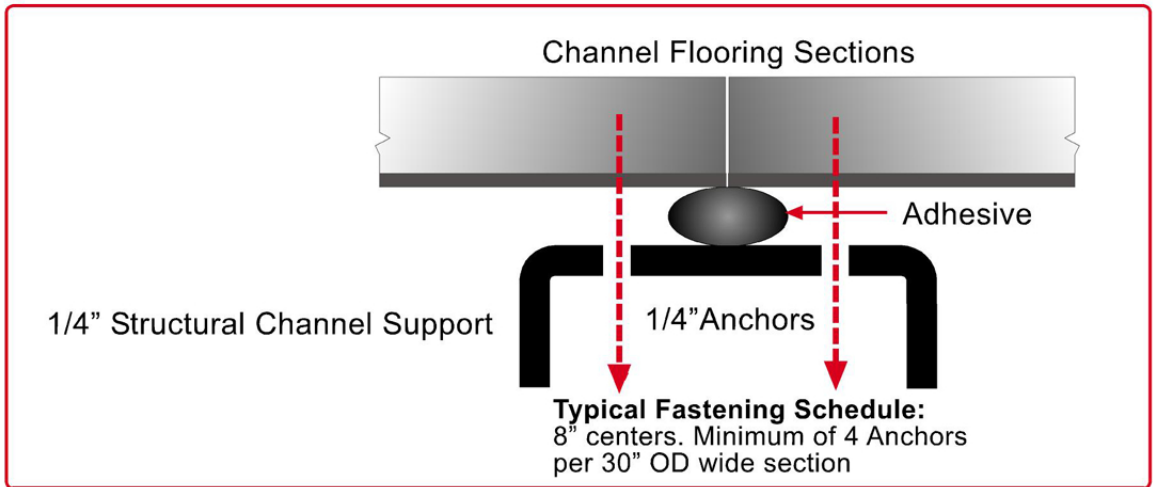


Apply Silka Flex 1A or equal Polyurethane sealant/adhesive at all Cjannel Flooring connecting locations before installing stainless fasteners. Fasteners ports should be caulked prior to installing screws or bolts. Fasteners should be located on maximum 8" centers.

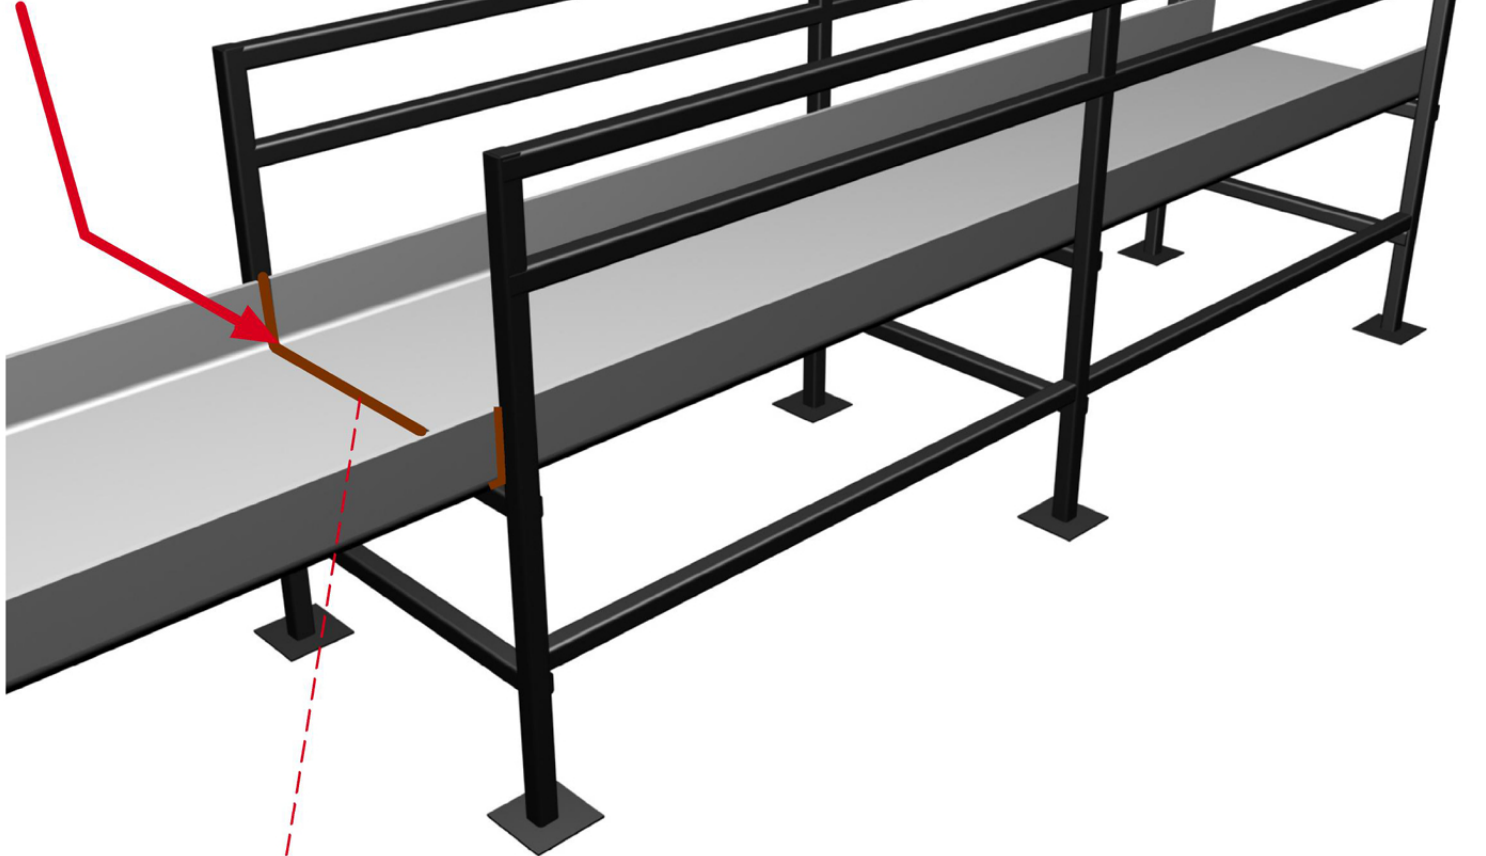

INSTALLATION GUIDE

**-Recommended Channel Flooring Structural Support Assembly:
Minimum 1/4" stock in stainless steel or aluminum**

-Manufacture recommends stainless steel anchors of min. 1/4" diameter flat head TEK screws or machine screws and lock nut assembly.

WARNING: DO NOT ATTEMPT TO WELD ON OR NEAR CHANNEL FLOORING MATERIAL.